

# Big Sky International, Inc. - Wisp 1P “Moon View” (MV) tent revD

## **\*\* Warning \*\***


**The both sides silicone coated SuprSil™ fabric we use has a very high strength to weight ratio, but it will burn so keep it away from heat or open flame.**

**We have enclosed a fabric swatch for a test burn... after burning a fabric swatch you need to decide to either to accept the risk of using the product with this fabric or return the unused product for full refund.**

### Setup instructions:


- 1) Clear the ground of any sharp objects that will damage the tent floor.
- 2) Unfold and insert 38cm (15in) pole into foot end pole pocket, if not already inserted. Pole pocket has flap next to ground that open/closes. (See drawing below)
- 3) Lay out the tent. Select site where water drains away from tent. Suggest foot end into the wind.
- 4) Stake/peg four (4) main 1cm (3/8in) webbing loops:
  - a. (1) Stake/peg head end with 1cm (3/8in) webbing
  - b. There should be a straight line between head and foot end stakes/pegs. (2) Stake/peg foot end with 1cm (3/8in) webbing.  
Note: if strong wind these steps may be reversed since foot end should be staked/pegged into the wind, but if you do the foot end first you will not be able to see if ridge line between poles is in a straight line so may need to adjust foot end peg after staking/pegging head end.
  - c. (3) Stake/peg the non-door side of Wisp tent, it should 90 degrees from straight line between head end and foot end.

See drawing below:

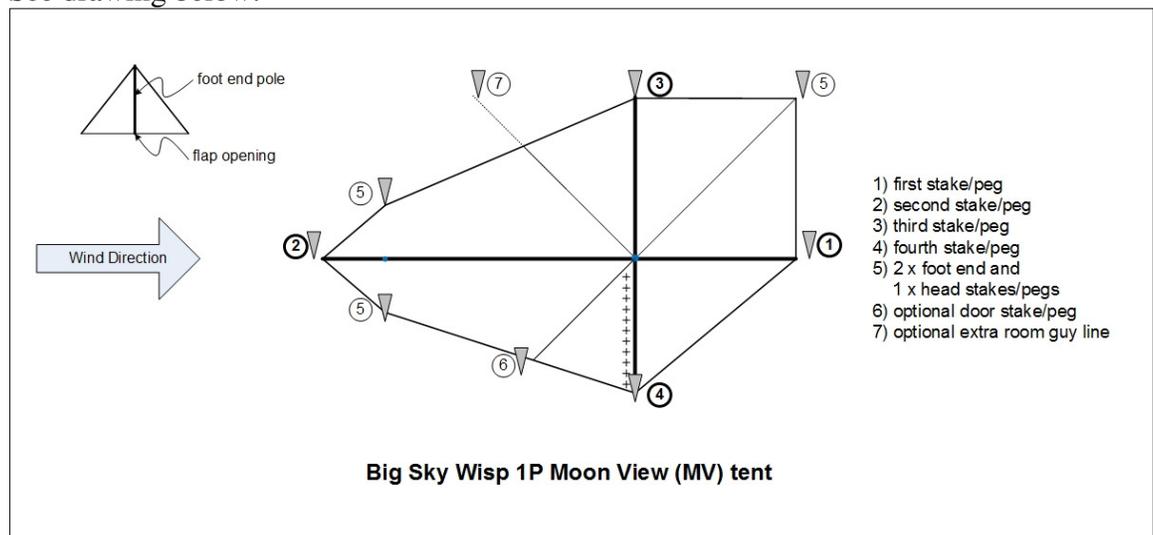

Note: do not tighten stake/peg webbing loops yet.


- 5) Adjust trekking/hiking pole length to 120cm or use optional 120cm pole.
- 6) Insert trekking/hiking pole from side with zipper. Unzip door, if necessary, to insert trekking pole, then close door zipper before (4) pegging door vestibule.  
**Important: handle should be UP and pointy end DOWN toward the ground.**  
The trekking/hiking pole should be adjusted so it is vertical and parallel to the mesh netting wall.
- 7) Stake/peg (5) foot end and head end. These stake/peg loops have cord with LineLoks.
- 8) Optional: (6) door stake/peg and (7) extra room guy line
- 9) Tighten stake/peg cords. Reset stakes/pegs if necessary. Cords may have to be tightened again later, especially after rain storm, etc. so leave enough untightened cord for later adjustments.  
**Note:** If you have never used a hiking/trekking pole tent before you may be surprised the amount of stakes/pegs it requires. Please remember on a freestanding tent the poles hold the tent up and the stakes/pegs resist wind loads, etc. On a hiking/trekking pole tent the stakes/pegs need to have enough holding power to hold the tent up AND resist wind loads, etc.
- 10) Install optional guy lines. (See guy line diagram below)

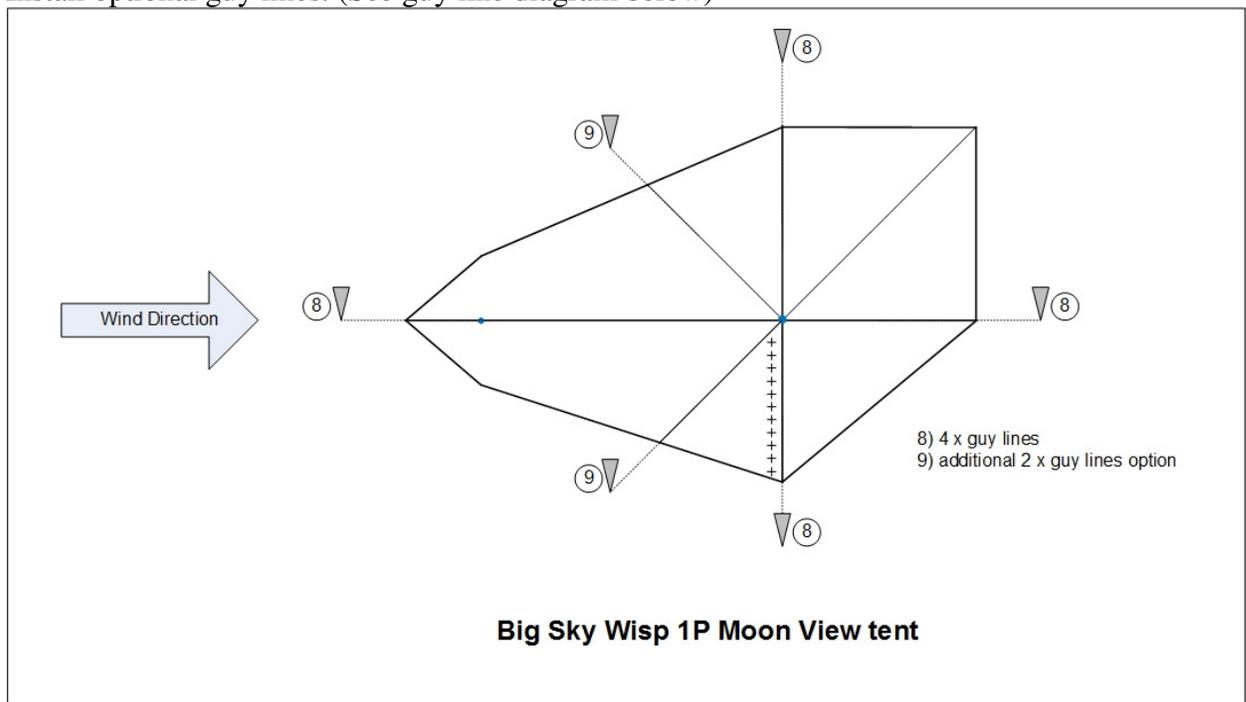

**Tip: using guy lines will increase the interior room because they pull the sides out.**

## Setting up Moon View (MV) option

- 1) Set up Big Sky's Wisp 1P Moon View (MV) tent normally.
- 2) There are stake/peg loops attached to inner floor at (1) and (5). There are also ring and toggles holding inner and outer together. Disconnect ring on outer from toggle on inner, then swap the stake/peg loops on outer at (1) and (5) for stake/peg loops on inner. See drawing below:

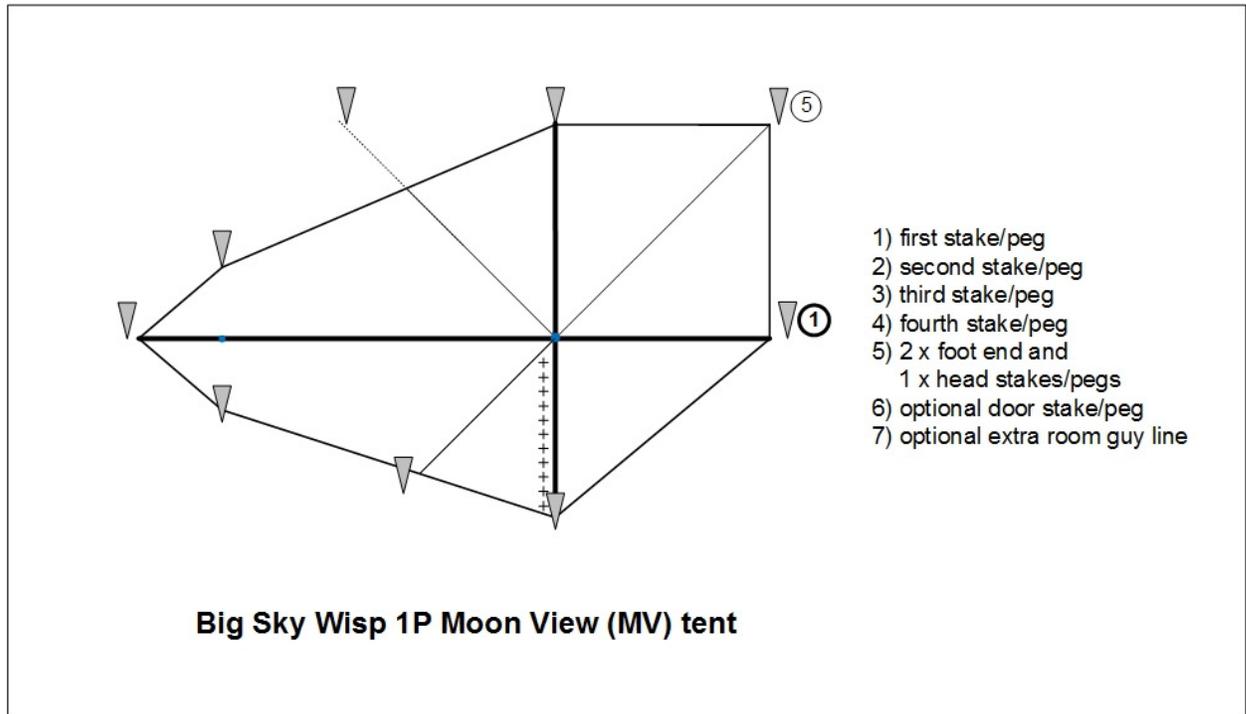

- 3) After the inner and outer have been disconnected, and the inner is staked/pegged, the outer can be rolled up and secured with tie backs.
- 4) This configuration can be used to enjoy viewing the stars/moon or add extra ventilation.

Note: This configuration is NOT as storm worthy as when not used/closed, and stakes/pegs are connected to four (4) webbing stake/peg loops.

### Packing instructions:

- 1) Reverse the setup instructions
- 2) We suggest rolling rather than stuffing. It results in a smaller volume. We also suggest rolling the end pole and stakes up in the tent or carrying them separately.

**Caution:** *Trying to “stuff” the poles and/or the stakes/pegs may result in tearing the mesh or tent.*