

It is important that all users read and understand the materials in this manual before any installation and use of the product.



WARNING TENTSILE IS NOT A TOY

RISK OF SERIOUS INJURY

A VISUAL AND TACTILE INSPECTION OF YOUR TENTSILE'S FLOOR, STRAPS AND BUCKLES SHOULD BE MADE BEFORE EACH USE.

FOR SAFETY REASONS, STRAPS SHOULD BE REPLACED EVERY 2 YEARS.

DO NOT LEAVE OUTSIDE UNATTENDED FOR MORE THAN A WEEK.

CHECK THE HEALTH AND STRENGTH OF THE TREES CHOSEN TO BE ANCHOR POINTS BEFORE USE.

Recommended set up height 1.2m / 4 feet

MAX LOAD 200kg / 440lbs.

DO NOT EXCEED MAXIMUM WEIGHT LOAD CAPACITY.

CONGRATULATIONS YOU ARE NOW THE PROUD OWNER OF A

Tentsile T-Mini Kidz

IT IS IMPORTANT THAT ALL USERS READ AND UNDERSTAND THE MATERIALS

03: Introduction 09-22: Set up instructions

04: Terms of Use 23: Floor calibration

05: Specifications 25: Policies

06: Warnings & Disclaimers 26: The small print

07-08: Layout & Alignment

Introduction

The T-Mini Kidz provides a unique opportunity for you and your family to experience the great outdoors with a whole new level of freedom and comfort.

The T-Mini comprises of a double hammock, suspended in tension above the ground for 2 people using our new Pull-to-Tension, Press-to-Release system..

The unique design creates a comfortable base camp, irrespective of ground conditions, as well as providing increased protection from, snakes and other predators – if you venture somewhere more exotic.

This product was created because Tentsile loves trees and believes that if we're all hanging out in trees, they can't cut them down!

18 trees are planted for every Tentsile Tree Tent sold. :)

PLAY, CAMP, EXPLORE...

Terms of Use

Tentsile Tree Tents should be set up only as outlined in this manual.

NEVER jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops.

DO NOT attempt to use this product for anything another than its intended purpose, and always observe height and weight limits.

DO NOT use walls, fences, street furniture, roof racks, movable platforms, posts or trees less than 25cm/10inches in diameter as anchor points, as they may not be strong enough.

DO NOT use tensioning components other than those supplied with this product.

DO NOT set up higher than 1.2metres / 4 feet from the ground or above hard, sharp or pointy objects.

Tactile and visual checks should be made to ALL tent components and ALL anchor points before each use.

Replace any damaged elements if any are found.

Keep away from fire and sharp objects.

DO NOT use after the consumption of any intoxicating substances.

Children must be supervised by an adult at all times.

DO NOT attach to trees or branches that show signs of structural weakness.

DO NOT adjust/open ratchets whilst tent is occupied.

DO NOT use during lightning storms or high winds.

DO NOT use in areas of unstable ground.

Tentsile Tree Tents do not offer protection from all animals.

Specifications

Size:

 $3.25 \times 3.25 \times 2.7 \text{m} / 10 \times 10 \times 8 \text{ft}$

Floor area: 3.75sqm / 40sqf

Bag Size:

30 x 14 x 14cm / 12 x 6 x 6"

Buckles & straps: x3 5m/15ft polyester webbing strap (width 25mm /1") +2 WebLocks a non-slip adjuster.

Tent weight: 1.8kg / 4.0lbs

Maximum capacity: 2 adults.

Maximum height: 1.2m / 4ft

DO NOT EXCEED MAXIMUM LOAD 200kg / 440lbs

Warnings & Disclaimers

Installation and use of the Tentsile Tree Tent may involve heights, can be dangerous and may lead to injury and/or death.

The installation must never be executed by minors, and extreme care and caution must be taken when executed by adults.

Do not use any other components, parts, tools or materials other than those included in the Tentsile Tree Tent package, recommended in this manual or in other Tentsile literature.

A hanging and/or suspension system is only as strong as its weakest link and all instructions and guidelines must be followed.

The Tentsile Tree Tent must only be used in the manner described in this manual. When assembled and installed, the Tentsile Tree Tent places significant force on the anchor points;

great care must be exercised when using it to decrease the risk of injury and/or death.

Overloading the Tentsile Tree Tent with more than 440lbs (200kg) increases the forces and may cause anchor, Tree Tent and/or any parts to fail, resulting in injury and/or death.

The manufacturer and resellers of the Tentsile Tree Tent explicitly disclaim any and all responsibility and liability for any death, paralysis, injury, and/or damage to any person or property that may occur that arises out of or is in any way related to the use of this product.


Using any equipment that is suspended above ground can be a dangerous activity that may result in serious injury and/or death even when used properly. Use at your own risk and always use common sense.

Positioning the T-Mini Kidz

Tentsile Tree Tents need 3 secure and strong anchor points to suspend from. The distances are marked below. Once the location is found, lay out the T-Mini Kidz on the ground with the corners facing your selected trees.




Alignment

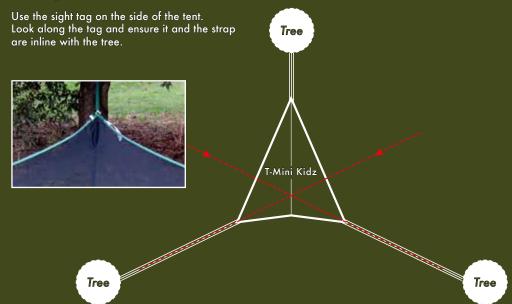

Lay Out The T-Mini Kidz

Take the T-Mini Kidz and lay it out on the ground in the desired location between yout selected trees. Ensure it is the correct way up with the calibration centre strap face down.

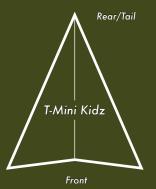



Tree Straps

With a location found and the T-Mini Kidz layed in position, start by wrapping the tree straps around your selected trees.










Tree Straps to Weblocks

Weblocks are quick and secure ways of attaching the tree straps to the T-Mini Kidz.

The Weblocks are already secured to the T-Mini Kidz front corners. Do both corners before attaching the rear buckle.

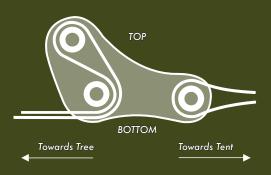








Now pull the strap towards to the tree but not tight yet.

Keep it slacked

With both front corners attached, keep the T-Mini Kidz slacked so the rear buckle can be attached.

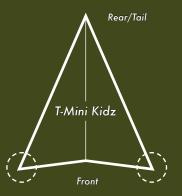




Using the Buckle

The rear buckle is a pull-to-tension and press-to-release system.

The tree strap is simply fed underneath the buckle and pulled through towards the tree to tighten. Pressing the buckle will release the strap.

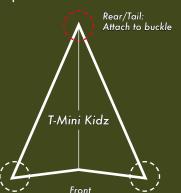








Aligning the T-Mini Kidz

With the T-Mini Kidz now raised you must ensure it is correctly aligned with the anchor points before pulling tight

The centre point of each side the tree straps should line up straight.

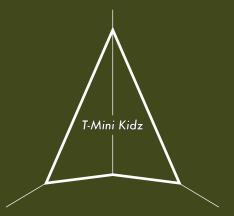



Pull Tight

With the T-Mini Kidz all aligned, pull the tree straps tight via the Weblocks and rear buckle ensuring it remains aligned without any sagging.





Floor Strap Calibration

Tentsile Trees Tents come pre-calibrated, but will stretch over time, so you will need to loosen the underfloor strap, using the buckle every so often. Here is how.

When the T-Mini Kidz is up, the centre (underfloor) strap should provide a clear delineation between both hammock berths. To increase this tension (and therefore separation between the two hammocks) just tighten the adjuster buckle strap on the underside.

This re-tensioning will need to take place every so often as the materials stretch into full size over time.

If you are using the T-Mini Kidz alone, you can slack off this strap completely and have the whole floor as a large single hammock berth to yourself.



Policies

Maintenance

Visual and Tactile inspection of all components for structural damage before every use and dry out Tentsile Tree Tent thoroughly before packing away. Tentsile Tree Tent should be stored safely in a dry environment.

Returns

You can return this product, in a clean and dry condition within 4 weeks of purchase and expect a full refund or replacement. If a manufacturing defect occurs within 1 year of reasonable* use, the product can be returned for repair or exchange.

Weather

The Tentsile Tree Tent is not intended to be used in severe weather. If there is weather that creates dangerous conditions, such as storms, heavy rain, high winds, and/or lightning, do not use or remain in the Tentsile Tree Tent in or during those conditions. It is recommended that the Tentsile Tree Tent is taken down and stored to avoid remaining inside and being subject to such conditions. Leaving the Tentsile Tree Tent out and installed in bad weather can lead to potential destruction and/or damage to it (not covered by warranty). If the Tentsile Tree Tent is subject to such

conditions, it and its anchor/hanging system should be inspected in detail prior to any future use. Be sure to thoroughly dry the Tentsile Tree Tent before storing.

Customer Service Charter

Quality first – We will manufacture, sell and distribute the best possible quality Tentsuile Tree Tents in the World.

Customer focus – We will provide prompt, courteous and efficient service, with honesty and integrity and expert, clear, and timely information to customers and colleagues.

Tentsile Promise - We will strive for a 'get it right first time, every time' in all our dealings in manufacturing, distribution, sales, and service.

This policy does not cover damage incurred by environmental conditions, weather conditions, or apocalyptic events.

Contact us

The small print

The Tentsile Tree Tent is designed for play, relaxation, and camping/sleeping. Never jump into, onto or use it as a trampoline or swing. It is not intended to be used for rock climbing, cliff faces, overhangs or above or next to large drops. Do not attach or secure the Tentsile Tree Tent to a movable platform or anchor; it is not intended to be used for such recreation or activities. Do not attempt to use this product for anything other than its intended purpose, and always observe height and weight limits.

Warranties

This one year warranty covers all manufacturing faults of fabrics, parts and workmanship. This warranty covers the functionality of the product for its normal, intended use as specified in Tentsile's consumer literature, incl. website.

It does not cover poles or malfunction of any component that has resulted from improper or unreasonable use or neglectful maintenance, the user's use of undersized or unhealthy trees, sharp objects or fire near the Tentsile Tree Tent or the use by more than the recommended number of persons, at the recommended set up height.

This policy does not cover damage incurred by environmental conditions, weather conditions, or apocalyptic events.

The warranty herein will not be honoured for products that are purchased through an unauthorised dealer or secondary reseller.

Unauthorised and/or resold products are not backed up by the high quality standards and dependability of original products sold by authorized dealers. By buying from an unauthorised dealer you could get a product that is counterfeit, stolen, or re-manufactured, and being listed as new.

To redeem any potential warranty you will need to provide proof of purchase with the product.

Other than as described above, the manufacturer, sellers, and resellers of this product make no other representations and/or warranties, either express or implied, regarding the product, including without limitation, any warranties as to merchantability, quality, or fitness for a particular purpose.

The manufacturer, sellers, and resellers shall not be liable in any way whatsoever for special, indirect, consequential, or incidental damages, whether based on breach of contract, breach of warranty, tort (including negligence), product liability or otherwise, even if they have been advised of the possibility of such damages. Violation of the instructions and warnings herein operates as a waiver of claims by the user.

The Tentsile Tree Tent user agrees that his or her full remedy against the manufacturer, sellers, and resellers for any liability, claims, or damages, shall be limited to the purchase price of the Tentsile Tree Tent, and irrevocably waives all claims for any other damages that such user may have.

^{*}use as intended and outlined herein and no more than 3 months continuous use.



www.tentsile.com

All rights reserved Tentsile Ltd 2015
Patent Pending