 



# INSTRUCTIONS FOR SETUP

To contact NEMO Customer Service  
Email: [journey@nemoequipment.com](mailto:journey@nemoequipment.com)  
Phone: 800-997-9301





## 1 Insert Poles in Corner Grommets

 Lay the inner tent on the ground and arrange the hubbed pole set so pole tips point toward the corners. Insert locking pole tips into corner grommets.



## 2 Secure Ridge Poles

  Position the ridge poles on top of main poles, and use finger loops to help insert ridge pole tips into side wall grommets.



## 3 Attach Inner Tent to Poles

Attach the inner tent canopy to the poles using pole clips. Use larger clips at pole intersections.



## 4 Attach Rain Fly

Cover the inner tent with the rain fly. Locate the webbing straps on the corners of the fly and secure the buckles at the corner anchors. Adjust tension in the fly using the webbing straps.




## 5 Stake in Place

Position your tent as desired and stake the four corner anchors. As you pull at the corners, watch the tension in the floor of the tent to keep it even. If the ground is too hard for stakes, tie anchors to rocks or other heavy objects.



## 6 Vestibules and Tension

Stake both vestibules and pull firmly on all adjustable corner anchors. Add guy-lines for additional strength. A properly tensioned tent ensures maximum water shedding and wind resistance.

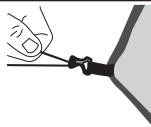

©2018 NEMO Equipment, Inc.



Remember to leave no trace. Before leaving your campsite, take a thorough look around making sure you have not left anything behind, out of place, or damaged.

LOSI™ SERIES